

# Fire Prevention Week 2009

## Stay Fire Safe! Don't Get Burned

Many families gather in the kitchen to spend time together, but it can be one of the most hazardous rooms in the house if you don't practice safe cooking behaviors. Cooking equipment, most often a range or stove top, is the leading cause of reported home fires and home fire injuries in the United States. Cooking equipment is also the leading cause of unreported fires and associated injuries.

### Safe Cooking Behaviors



#### Cooking Fire Safety Video Clips

Short, educational messages for safe home cooking to avoid fires and other burns.

[Keep Things Away from Heat](#)

[Keep Kids Away from Cooking Areas](#)

[Prevent Scalds and Burns](#)

[Watch What You Heat](#)

[Know What to Do if There is a Fire](#)

#### Radio on Fire Audio PSAs

This series addresses the top five fire-safety topics most frequently identified with home fire deaths: smoke alarms, escape plans, child fire safety, older adult fire safety (cooking and heating), and careless smoking. [Download Scripts and PSAs »](#)

## Product Safety Tip: Turkey Fryers



The delicious deep-fried turkey has quickly grown in popularity but safety experts are concerned that backyard chefs may be sacrificing fire safety for good taste.

### [Here's why using a deep-fryer can be dangerous »](#)

It's a recipe for serious injury or even death to wear loose clothing (especially hanging sleeves), walk away from a cooking pot on the stove, or leave flammable materials, such as potholders or paper towels, around the stove. Whether you are cooking the family holiday dinner or a snack for the children, practicing safe cooking behaviors will help keep you and your family safe.

## Choose the Right Equipment and Use It Properly

Always use cooking equipment tested and approved by a recognized testing facility.

Follow manufacturers' instructions and code requirements when installing and operating cooking equipment.

Plug microwave ovens and other cooking appliances directly into an outlet. Never use an extension cord for a cooking appliance, as it can overload the circuit and cause a fire.

## Use Barbecue Grills Safely

Position the grill well away from siding, deck railings, and out from under eaves and overhanging branches.

Place the grill a safe distance from lawn games, play areas, and foot traffic.

Keep children and pets away from the grill area by declaring a 3-foot "kid-free zone" around the grill.

Put out several long-handled grilling tools to give the chef plenty of clearance from heat and flames when cooking food.

Periodically remove grease or fat buildup in trays below grill so it cannot be ignited by a hot grill.

Use only outdoors! If used indoors, or in any enclosed spaces, such as tents, barbecue grills pose both a fire hazard and the risk of exposing occupants to carbon monoxide.

### **Charcoal Grills**

Purchase the proper starter fluid and store out of reach of children and away from heat sources.

Never add charcoal starter fluid when coals or kindling have already been ignited, and never use any flammable or combustible liquid other than charcoal starter fluid to get the fire going.

### **Propane Grills**

Check the propane cylinder hose for leaks before using it for the first time each year. A light soap and water solution applied to the hose will reveal escaping propane quickly by releasing bubbles.

If you determined your grill has a gas leak by smell or the soapy bubble test and there is no flame:

Turn off the propane tank and grill.

If the leak stops, get the grill serviced by a professional before using it again.

If the leak does not stop, call the fire department.

If you smell gas while cooking, immediately get away from the grill and call the fire department. Do not attempt to move the grill.

All propane cylinders manufactured after April 2002 must have overfill protection devices (OPD). OPDs shut off the flow of propane before capacity is reached, limiting the potential for release of propane gas if

the cylinder heats up. OPDs are easily identified by their triangular-shaped hand wheel.

Use only equipment bearing the mark of an independent testing laboratory. Follow the manufacturers' instructions on how to set up the grill and maintain it.

Never store propane cylinders in buildings or garages. If you store a gas grill inside during the winter, disconnect the cylinder and leave it outside.

## **Watch What You Heat**

The leading cause of fires in the kitchen is unattended cooking.

Stay in the kitchen when you are frying, grilling, or broiling food. If you leave the kitchen for even a short period of time, turn off the stove.

If you are simmering, baking, roasting, or boiling food, check it regularly, remain in the home while food is cooking, and use a timer to remind you that you're cooking.

Stay alert! To prevent cooking fires, you have to be alert. You won't be if you are sleepy, have been drinking alcohol, or have taken medicine that makes you drowsy.

## **Keep Things That Can Catch Fire and Heat Sources Apart**

Keep anything that can catch fire - potholders, oven mitts, wooden utensils, paper or plastic bags, food packaging, towels, or curtains - away from your stovetop.

Keep the stovetop, burners, and oven clean.

Keep pets off cooking surfaces and nearby countertops to prevent them from knocking things onto the burner.

Wear short, close-fitting or tightly rolled sleeves when cooking. Loose clothing can dangle onto stove burners and catch fire if it comes into contact with a gas flame or electric burner.

## **If Your Clothes Catch Fire**

If your clothes catch fire, stop, drop, and roll. Stop immediately, drop to the ground, and cover face with hands. Roll over and over or back and forth to put out the fire. Immediately cool the burn with cool water for 3 to 5 minutes and then seek emergency medical care.

### **Use Equipment for Intended Purposes Only**

Cook only with equipment designed and intended for cooking, and heat your home only with equipment designed and intended for heating. There is additional danger of fire, injury, or death if equipment is used for a purpose for which it was not intended.

### **Protect Children from Scalds and Burns**

Young children are at high risk of being burned by hot food and liquids. Keep children away from cooking areas by enforcing a "kid-free zone" of 3 feet (1 meter) around the stove.

Keep young children at least 3 feet (1 meter) away from any place where hot food or drink is being prepared or carried. Keep hot foods and liquids away from table and counter edges.

When young children are present, use the stove's back burners whenever possible.

Never hold a child while cooking, drinking, or carrying hot foods or liquids.

Teach children that hot things burn.

When children are old enough, teach them to cook safely. Supervise them closely.

### **Prevent Scalds and Burns**

To prevent spills due to overturn of appliances containing hot food or liquids, use the back burner when possible and/or turn pot handles away from the stove's edge. All appliance cords need to be kept coiled and away from counter edges.

Use oven mitts or potholders when moving hot food from ovens, microwave ovens, or stovetops. Never use wet oven mitts or potholders as they can cause scald burns.

Replace old or worn oven mitts.

Treat a burn right away, putting it in cool water. Cool the burn for 3 to 5 minutes. If the burn is bigger than your fist or if you have any questions about how to treat it, seek medical attention right away.

## **Install and Use Microwave Ovens Safely**

Place or install the microwave oven at a safe height, within easy reach of all users. The face of the person using the microwave oven should always be higher than the front of the microwave oven door. This is to prevent hot food or liquid from spilling onto a user's face or body from above and to prevent the microwave oven itself from falling onto a user.

Never use aluminum foil or metal objects in a microwave oven. They can cause a fire and damage the oven.

Heat food only in containers or dishes that are safe for microwave use. Open heated food containers slowly away from the face to avoid steam burns. Hot steam escaping from the container or food can cause burns.

Foods heat unevenly in microwave ovens. Stir and test before eating.

## **How and When to Fight Cooking Fires**

When in doubt, just get out. When you leave, close the door behind you to help contain the fire. Call 9-1-1 or the local emergency number after you leave.

If you do try to fight the fire, be sure others are already getting out and you have a clear path to the exit.

Always keep an oven mitt and a lid nearby when you are cooking. If a small grease fire starts in a pan, smother the flames by carefully sliding the lid over the pan (make sure you are wearing the oven mitt). Turn off the burner. Do not move the pan. To keep the fire from restarting, leave the lid on until the pan is completely cool.

In case of an oven fire, turn off the heat and keep the door closed to prevent flames from burning you or your clothing.

If you have a fire in your microwave oven, turn it off immediately and keep the door closed. Never open the door until the fire is completely out. Unplug the appliance if you can safely reach the outlet.

After a fire, both ovens and microwaves should be checked and/or serviced before being used again.

## **Nuisance Smoke Alarms**

Move smoke alarms farther away from kitchens according to manufacturers' instructions and/or install a smoke alarm with a pause button.

If a smoke alarm sounds during normal cooking, press the pause button if the smoke alarm has one. Open the door or window or fan the area with a towel to get the air moving. Do not disable the smoke alarm or take out the batteries.

Treat every smoke alarm activation as a likely fire and react quickly and safely to the alarm